Provisioning Algo Devices

Step-by-step guide

- 1. Navigate to Algo's IP address. If you do not know your device's IP address, press the **reset** button on the device. The IP address will be read out. Press the reset button again to stop the readout.
- 2. Log into your Algo device's web interface (the default password is algo).
- 3. Navigate to Advanced Settings >> Provisioning
- 4. Set the Server Method to Static.

· · · ·	Settings				
	Server Method	Auto (DHCP Option 66/160/150) DHCP Option 66 only DHCP Option 150 only DHCP Option 150 only @static @Auto mode automatically checks all 3 DHCP options for an active provisioning server, in the order			
		listed.			
	Static Server	noctel.com			

5. Enter noctel.com for the Static Servier address.

6.	Select HTTPS for the Download Method.			
	Download Method	Otetd (FTP OHTTP	• • HTTPS

- 7. Press the **Save** button at the bottom of the page.
- 8. Click the **Reboot** button. The speaker will reboot, connect to NocTel.com to receive its configuration, upgrade if necessary, and then be operational within a matter of 2-3 minutes.

Related articles

- Connecting an Algo 8301 to an Analog Paging System
- Use Cases: Algo 8301 Paging Adapter and Scheduler
- Use Cases: Algo Speaker & Visual Alerters
- Common Paging Issues
- Updating Algo Firmware