


Physically Connecting a VoIP Phone to Your Network

Ensuring that a device is correctly connected to your network is very important. Most Polycom VoIP desk phones have two connectors for Ethernet cables. One is a pass-through port to connect a computer, the other is port is to connect to an active network. Use the below image to properly connect a new phone to your network.

- The red circle should be connected directly to the network jack that leads to a switch which is Power Over Ethernet enabled.
- The yellow circle is to connect a PC to so you do not need to network connections. The PC can use the phone as a switch if need be.

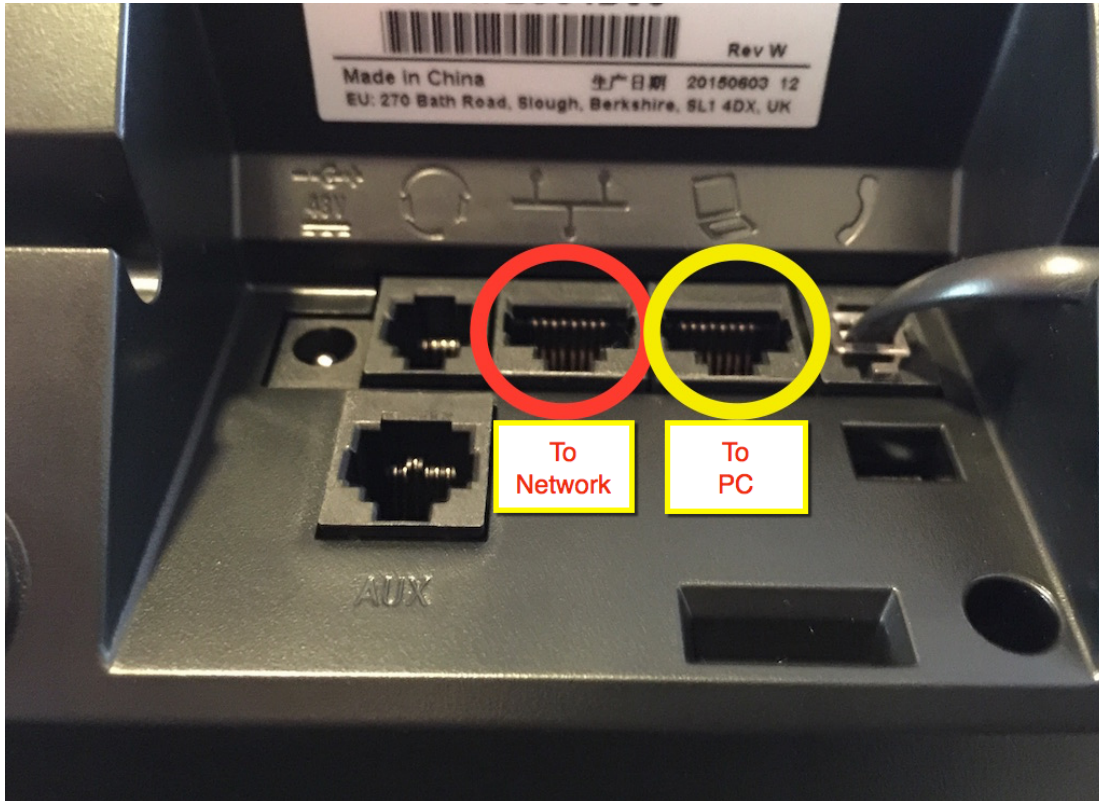

Related articles

- [Call Forwarding](#)
- [Using a Algo Paging Speaker as a Ringer](#)
- [Creating an Auto Attendant](#)
- [Quick Start Guides](#)
- [Provisioning and Setup of Grandstream HT802 ATA](#)